AIR MOTOR

EX-103 (5,500min⁻¹(rpm), 4:1 GEAR REDUCTION) **EX-203** (22,000min⁻¹(rpm))

Please read this Operation Manual carefully before use, and file for future reference.

MADE IN JAPAN OM-M0014E 002




(1) CAUTION

- · When operating the airmotor always consider the safety of the patient.
- · Should the airmotor function abnormally, cease operation immediately and return the airmotor to the dealer for repair.
- Do not disconnect the handpiece until the airmotor has completely stopped.
- · Do not disassemble unless otherwise instructed nor alter the airmotor.
- · Do not drop nor hit airmotor against hard object.
- · Always check for vibration, heating, noise and sluggish operation before use in the patient's mouth. If such abnormality is found, stop use and call the dealer.

1. Features

- · Various E-type (ISO-3964 Compatible) attachments are adaptable.
- The motor is Autoclavable.
- · Specially-coated cylinder provides outstanding durability.
- · Selection of Forward or Reverse Rotation, or Stop is achieved at the motor.

2. Specifications

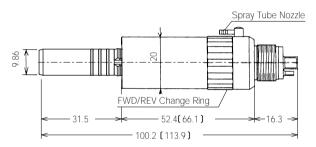

Weight.....90(105)g

Fig. 1

Dimensions are Midwest 4-hole type.

Dimensions parentheses are for EX-103 motor.

Speed and Air Consumption Rate by Drive Air pressure.

Figures in parentheses are for EX-103 motor.

Drive Air (MPa)	Speed (min ⁻¹ (rpm))	Air Consumption (NL/min)	
0.25	22,000(5,500)	42	
0.3	25,000(6,250)	51	
0.4	27,000[6,750]	72	

Speed may vary slightly depending on the back-end configuration the direction of rotation, type of hose used.

3. Mounting of Attachment

- Mounting of Attachment Insert the E-type attachment in the motor insert.
- Removing the Attachment Pull out the attachment from the motor.

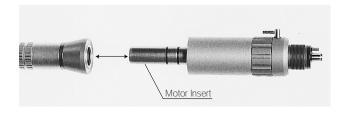


Fig. 2